


# WESTWOOD GARDEN TRACTORS 1984-1986 PARTS CATALOGUE

## CONTENTS

	<b>PAGE No.</b>
S600R, S600E, S800E AND S1000 UPPER FRAME, BONNET & GRILLE, CONSOLE, ELECTRICAL, SEAT, STEERING WHEEL, ROAD WHEELS	2 – 3
T800 AND T1100 UPPER FRAME, BONNET & GRILLE, CONSOLE, ELECTRICAL, SEAT, STEERING WHEEL, ROAD WHEELS	4 – 6
T1200 (DIESEL) AND T1600 UPPER FRAME, BONNET & GRILLE, CONSOLE, ELECTRIC, SEAT, STEERING WHEEL, ROAD WHEELS	7 – 9
MK4 TRACTORS S600, S800, T800, T1100, T1200 DIESEL AND T1600 TRACTORS (T1200 ILLUSTRATED)	10 – 12
30" GRASS CUTTER	13 – 14
36" STANDARD GRASS CUTTER	15 – 16
CONTRA-ROTATING GRASS CUTTERS 32", 36" AND 42"	17 – 18


ILLUSTRATION FOR:  
S600R, S600E, S800E AND S1000  
Upper Frame, Bonnet & Grille,  
Console, Electrical, Seat,  
Steering Wheel,  
Road Wheels

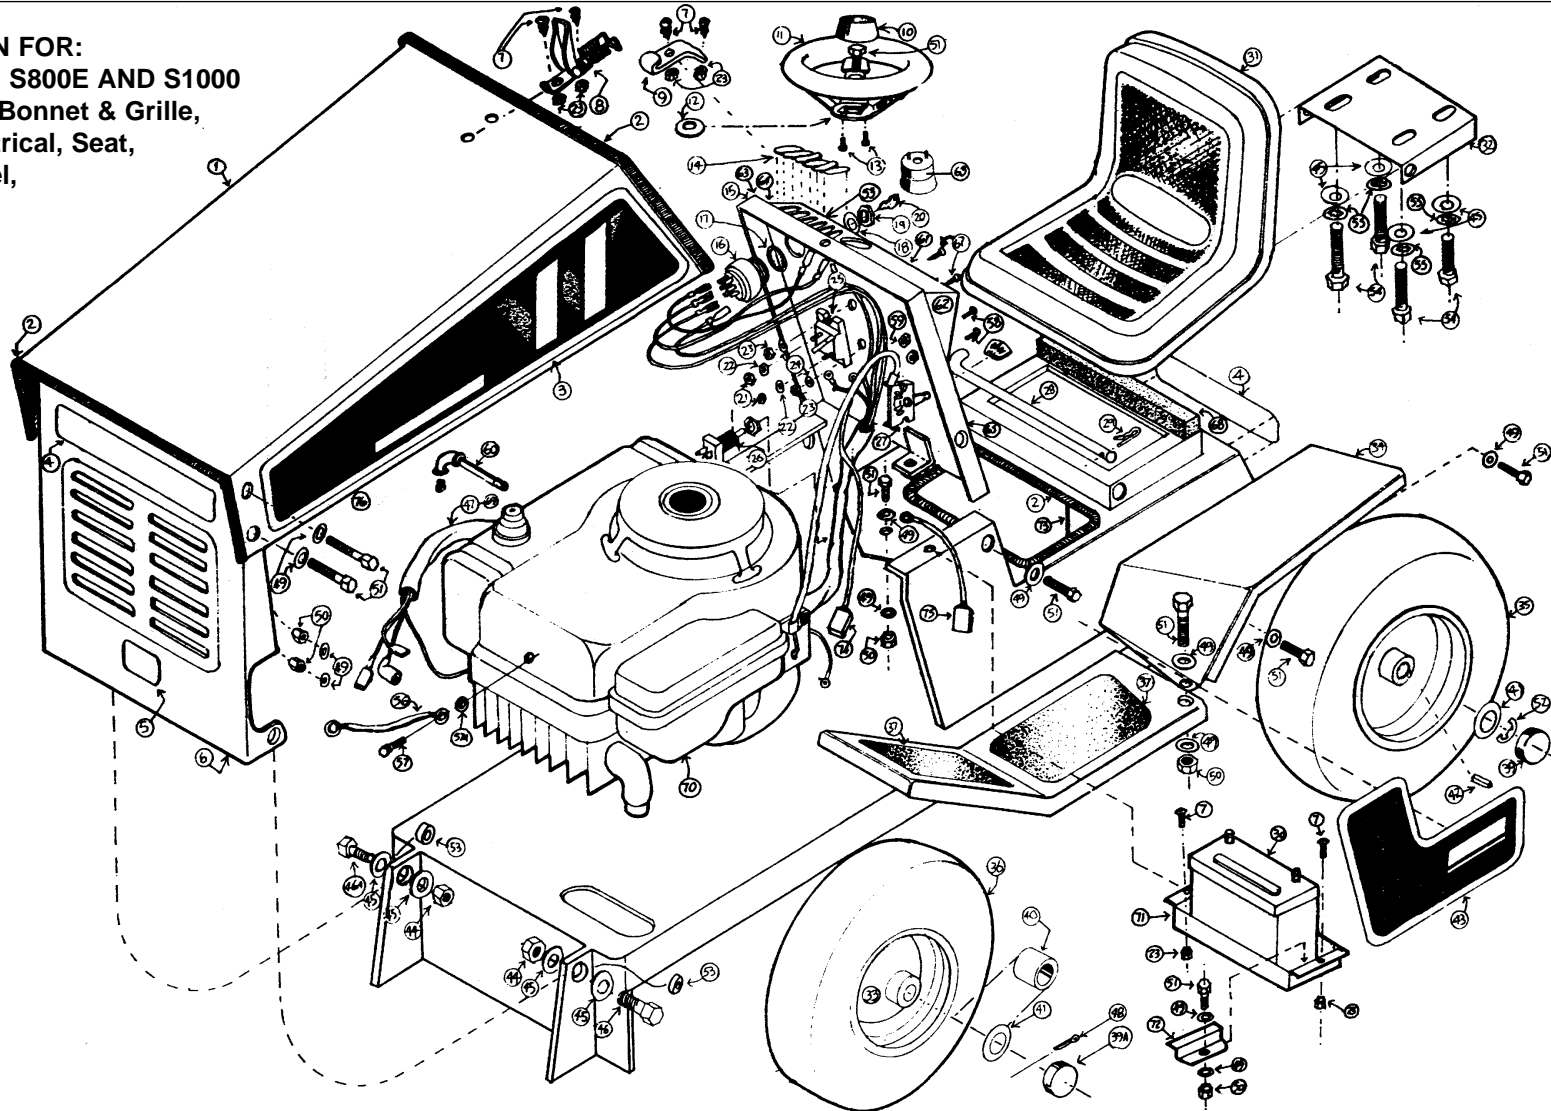

## PARTS LIST FOR: S600R, S600E, S800E and S1000

### Upper Frame, Bonnet & Grille, Console, Electrical, Seat, Steering Wheel, Road Wheels

Item	Part No	Description	Qty	Item	Part No	Description	Qty	Item	Part No	Description	Qty	
1	1739	Bonnet Baby 6 & 8 HP	1	27	1507	Throttle/Choke Control	1	55	1633	Washer, 3/8" Dia. Internal Shakeproof	4	
2	2057	Beading, Bonnet Front	1	28	2067	Seat Hinge Pin	1	56	1498	Bonnet Stay	1	
	1489	Beading, Bonnet Rear	1	29	1225	'R' Clip	1	57	2030	Setscrew, 1/4" UNC x		
	1645	Beading, Petrol Can Aperture	1	30	1209	12V Battery	1			3/4" LG. Hex. HD	1	
3	2696	Transfers, Tractor Set S600	1	31	1660	Seat	1	57A	1331	Washer, 1/4" Dia. Ord. Plain	1	
	2697	Transfers, Tractor Set S800	1	32	1742	Seat Mounting Plate	1	58	2021	M/C Screw 4BA x 1/2" LG Recess		
4		N/A		33	1173	Bush, Oilite, Front Wheels	4			Pan HD	2	
5		N/A		34	1501	Mudguard LH	1	59	1144	Nut, 4BA Self Locking Hex.	2	
6	2344	Grille, Baby 6 & 8 HP	1		1502	Mudguard RH	1	60	2074	Drain Pipe & Plug, Engine Oil		
7	1734	Screw 2BA x 1/2" LG		35	1746	Rear Wheel, Small	2			Baby 6HP	1	
		Recess Pan HD	6		1662	Hub, Rear Wheel	2			2075	Drain Pipe & Plug, Engine Oil	
8	1490	Bonnet Catch	1		1748	Inner Tube, Rear Wheel, Small	2			Baby 8HP	1	
9	2058	Bonnet Clip	1		1747	Tyre, Rear Wheel, Small	2	61		N/A		
10	2059	Steering Column Cap	1	36	1749	Front Wheel, Small	2	62		N/A		
11	2367	Steering Wheel MK.4	1		1541	Hub Front Wheel	2	63	2780	Steering Wheel Shroud	1	
12	1006	Disc Spring Washer			1201	Inner Tube Front Wheel, Small	2	64		Transfer 'Safe'		
		3/8" ID x 1 3/4" OD	1		1163	Tyre, Front Wheel	2	65		N/A		
13	2060	Pin Steering Column Cap	2	37	1650	Foot Rest Mat, Front (Tractor Set)	1	66		Not Allocated		
14	2061	Blank for light or switch position	1	38		N/A		67	1735	Machine Screw 2BA x 3/4" LG		
14-1	2062	'Safe Brake' and 'Safe Cutter' Light		39	2068	Hub Cap	4			Recess Pan HD	2	
		Green 12 V	2	40	1980	Spacer 3/4" ID x 1 1/4" OD x 3/8" LG	2	68	2079	Set Spring (Foam Rubber)	1	
14-2	2063	Light Amber 12V	1	41	1099	Washer 1/4" ID x 1 1/4" OD Plain	4	69	2080	Loom Tie	2	
14-3	2064	Ignition Light Red 12V	1	42	1664	Key 3/16" Sq Parallel x 2" LG	2	70	2081	Tecumseh 6HP Engine, Recoil Start	1	
15	2261	Console Body	1			Refer to Illust. 3			2082	Tecumseh 6HP Engine, Electric Start	1	
16	1649	Ignition Starter Switch	1	44	1324	Nut 3/8" Dia. Self Locking Hex.	2		2083	Briggs & Stratton 8HP Engine		
17	2049	Washer, 5/8" Dia. Internal Shakeproof	1	45	1323	Washer, 3/8" Dia. Ord. Plain	8			Electric Start	1	
18	1976	Washer, 5/8" ID x 1" OD Plain	1	46	1966	Bolt, 3/8" UNF x 1" LG. Hex. HD	2	71	2087	Battery Support Tray	1	
19	2065	Securing Nut (Ignition Switch)	1	47	2070	Main Wiring Loom, Baby 6 HP	1	72	2088	Restraining Bracket (Battery)	1	
20	2066	Ignition, Starter Key	2		2071	Main Wiring Loom, Baby 8 HP	1	73	2089	Lining, Petrol Can Aperture	1	
21	1969	Nut, 5/16" UNF Thin Locking Hex.	2	48	1227	Split Pin, 1/8" Dia. x 1 3/4" LG	2	74	2090	Snap on Connector, Battery Term. (Red)	1	
22	2047	Washer, 5/16" Dia.		49	1105	Washer, 5/16" Dia. Ord. Plain	28	75	2091	Snap on Connector, Battery Term.		
		Single Coil Locking	2	50	1273	Nut, 5/16" UNF Self Lock Hex.	14			(Blue)	1	
23	1053	Nut, 2BA Self Locking Hex.	6	51	1334	Bolt, 5/16" UNF x 3/4" LG. Hex. HD	11	76		N/A		
24	1962	Washer, 2BA Ord. Plain, Large	2	52	1663	'E' Clip for 3/4" Dia. Shaft	2	77	1813	Battery Lead, Black	1	
25	1530	Solenoid	1	53		N/A		78	1814	Battery Lead, Red	1	
26	1608	Safety Cut Out Switch (cutters)	1	54	2034	Setscrew, 3/8" UNC x 3/4" LG. Hex. HD	4					

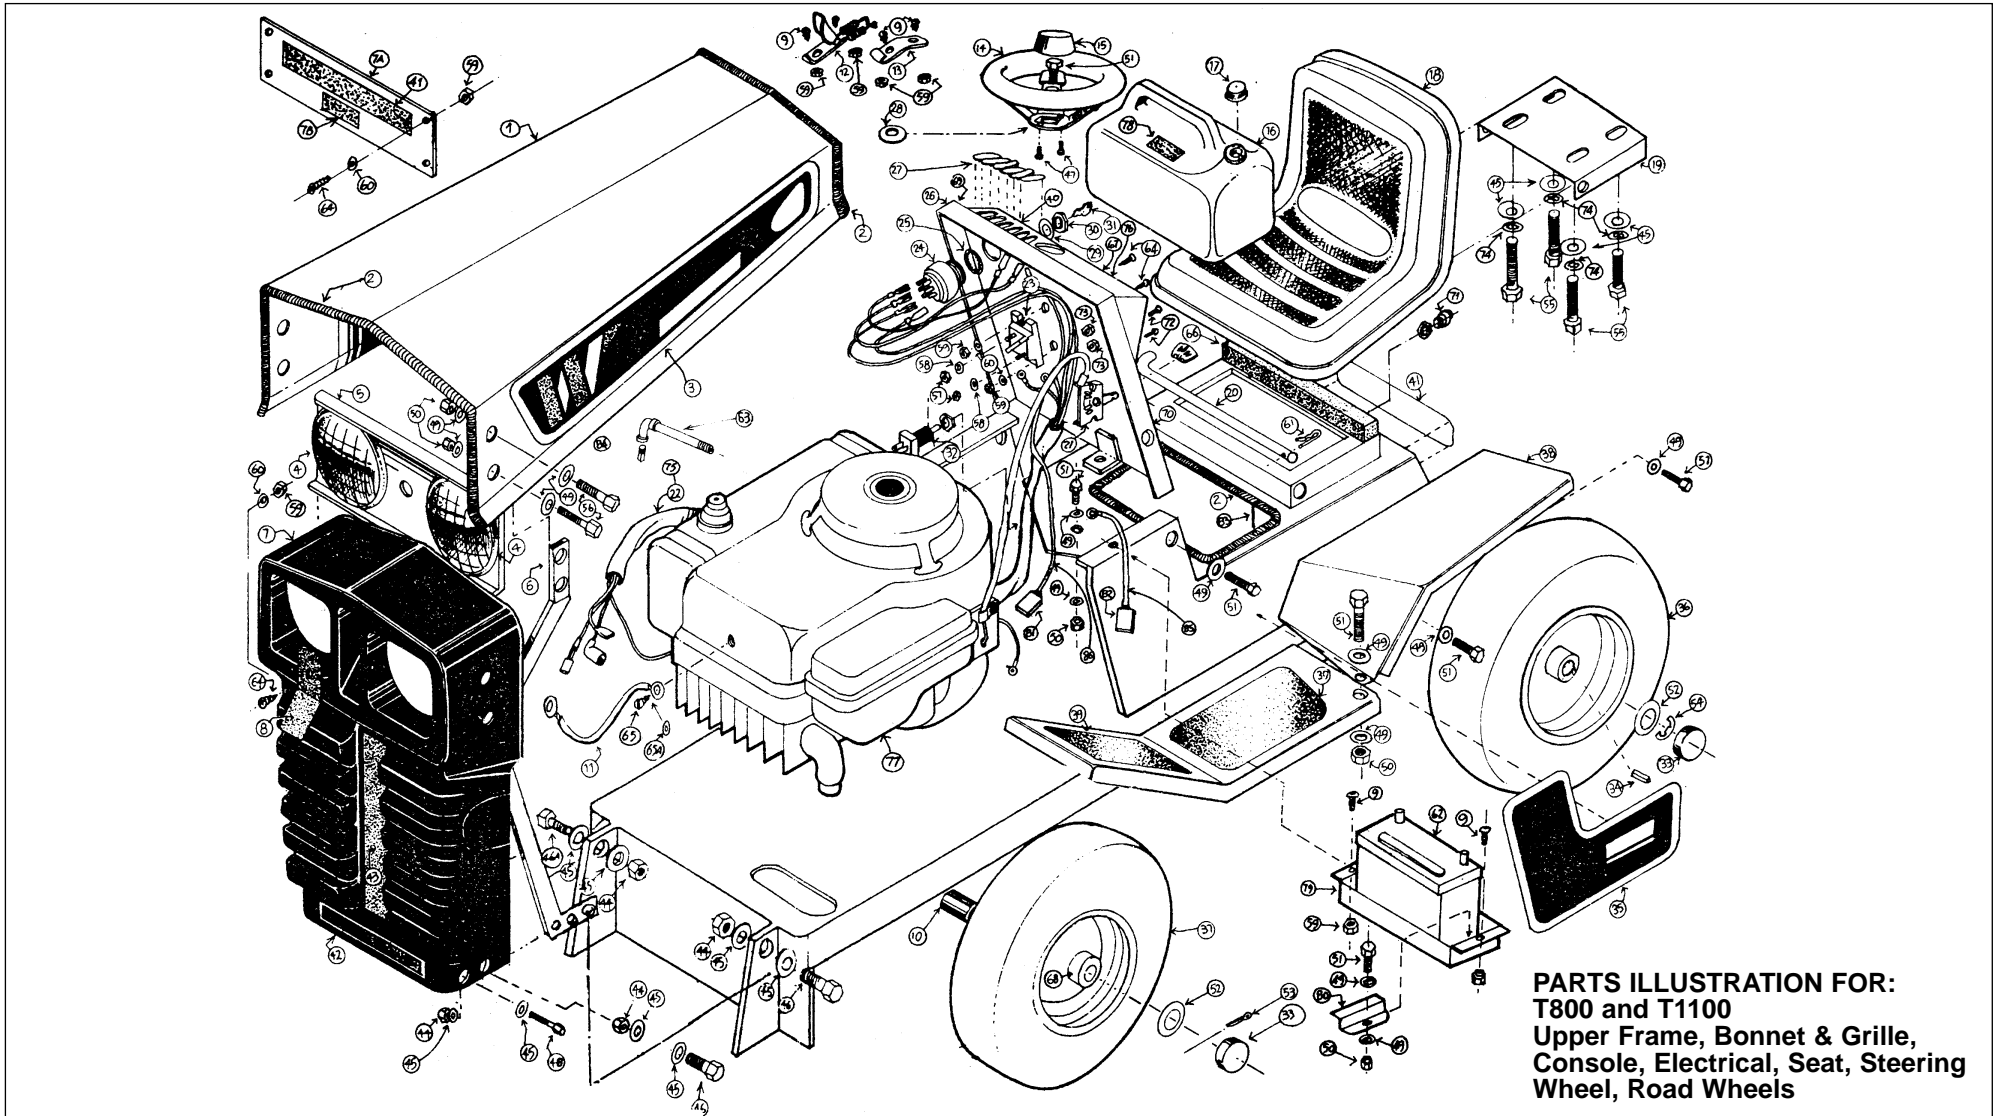


## PARTS LIST FOR: T800 and T1100

### Upper Frame, Bonnet & Grille, Console, Electrical, Seat, Steering Wheel, Road Wheels

Item	Part No	Description	Qty	Item	Part No	Description	Qty	Item	Part No	Description	Qty	
1	1643	Bonnet Std 8 & 11 HP	1	27/1	2062	'Safe Brake' and 'Safe Cutter' Light Green 12V	2	42		N/A	1	
2	1488	Beading Bonnet Front	1	27/2	2063	Charge On/Off Light Amber 12V	1	43		N/A	1	
	1489	Beading Bonnet Rear	1	27/3	2064	Ignition Light Red 12V	1	44	1324	Nut, 3/8" UNF Self Lock Hex.	6	
	1645	Beading Petrol Can Aperture	1	27/4	2099	'Lights On/Off' Light Illum. Switch White 12V	1	45	1323	Washer, 3/8" Dia. Ord. Plain	16	
3		Refer to Illust. 35		28	1006	Disc Spring Washer 3/8" ID x 1 3/4" OD	1	46	2016	Bolt, 3/8" UNF x 1 1/4" LG. Hex. HD	4	
4	1536	Headlight	2	29	1976	Washer 5/8" ID x 1" OD Plain	1	47	2060	Pin, Steering Column Cap	2	
5	1497	Retaining Plate Headlights	1	30	2065	Special Nut, Ignition/Starter Switch	1	48	1966	Bolt, 3/8" UNF x 1" LG. Hex. HD	2	
6	2257	Grille Frame	1	31	2066	Ignition/Starter Key	2	49	1105	Washer, 5/16" Dia. Ord. Plain	28	
7	1491	Grille, Std 8 HP	1	32	1608	Safety Cut Out Switch (Cutter)	1	50	1273	Nut, 5/16" UNF, Self Lock Hex	14	
	1492	Grille, Std 11 HP	1	33	2068	Hub Cap	4	51	1334	Bolt, 5/16" UNF x 3/4" LG. Hex. HD	11	
7A	1496	Blanking Plate	1	34	1644	Key, 3/16" sq. parallel x 2" LG	2	52	1099	Washer, 3/4" ID x 1 1/4" OD Plain	4	
7B		N/A		35	2698	Transfer Set S1100	1	53	1227	Split Pin, 1/8" Dia x 1 3/4" LG	2	
8	1495	Grille Plate	1		2699	Transfer Set T800	1	54	1663	'E' Clip for 3/4" Dia. Shaft	2	
		N/A			2700	Transfer Set T1100	1	55	2034	Setscrew, 3/8" UNC x 3/4" LG Hex HD	4	
9	1734	Machine Screw 2BA x 1/2" LG Recess Pan HD	6	36	1746	Rear Wheel Small	2	56	1335	Bolt, 5/16" UNF x 1 1/4" LG. Hex. HD	4	
10	1980	Spacer 3/4" ID x 1 1/4" OD x 3/8" LG	2		1586	Rear Wheel Large	2	57	1969	Nut, 5/16" UNF, Thin Lock Hex.	2	
11	1498	Bonnet Stay	1		1662	Hub Rear Wheel	2	58	2047	Washer, 5/16" Dia. Single Coil Lock	2	
12	1490	Bonnet Catch	1		1748	Inner Tube Rear Wheel Small	2	59	1053	Nut, 2BA Self Lock Hex.	13	
13	2058	Bonnet Clip	1		1588	Inner Tube Rear Wheel Large	2	60	1962	Washer, 2BA Dia. Ord. Plain Large	7	
14	2367	Steering Wheel	1		1747	Tyre Rear Wheel Small	2	61	1225	'R' Clip	1	
15	2059	Steering Column Cap	1		1587	Tyre Rear Wheel Large	2	62	1209	Battery 12V	1	
16	1658	Petrol Can	1		1587	Tyre Rear Wheel Large	2	63	2075	Drain Pipe & Plug, Engine Oil STD 8 & 11 HP	1	
17	1659	Cap, Petrol Can	1		1749	Front Wheel Small	2	64	1735	Machine Screw, 2BA x 3/4" LG Recess Pan HD.	7	
18	1660	Seat	1	37	1538	Front Wheel Large	2	65	2030	Setscrew, 1/4" UNC x 3/4" LG Hex HD	1	
19	1742	Seat Mounting Plate	1		1201	Inner Tube Front Wheel Small	2	65A	1331	Washer, 1/4" Dia. Ord. Plain	1	
20	2067	Seat Hinge Pin	1		1540	Inner Tube Front Wheel Large	2	66	2079	Seat Spring	1	
21	1507	Throttle/Choke Control	1		1163	Tyre Front Wheel Small	2			N/A		
22	2094	Main Wiring Loom Std. 8 HP	1		1539	Tyre Front Wheel Large	2	68	1173	Bush Oilite	4	
	2095	Main Wiring Loom Std. 11 HP	1		38	1501	Mudguard LH	1	69		N/A	
23	1530	Solenoid	1			1502	Mudguard RH	1	70		N/A	
24	1649	Ignition/Starter Switch	1		39	1650	Foot Rest Mat (Tractor Set)	1	71	2086	Accessory Power Socket	1
25	2049	Washer, 1/8" Dia. Internal Shakeproof	1		40		N/A	2	72	2021	Machine Screw, 4BA x 1/2" LG. Recess Pan HD.	2
26	2261	Console Body	1	41			N/A	1				
27	2061	Blank for Light or Switch Position	1									



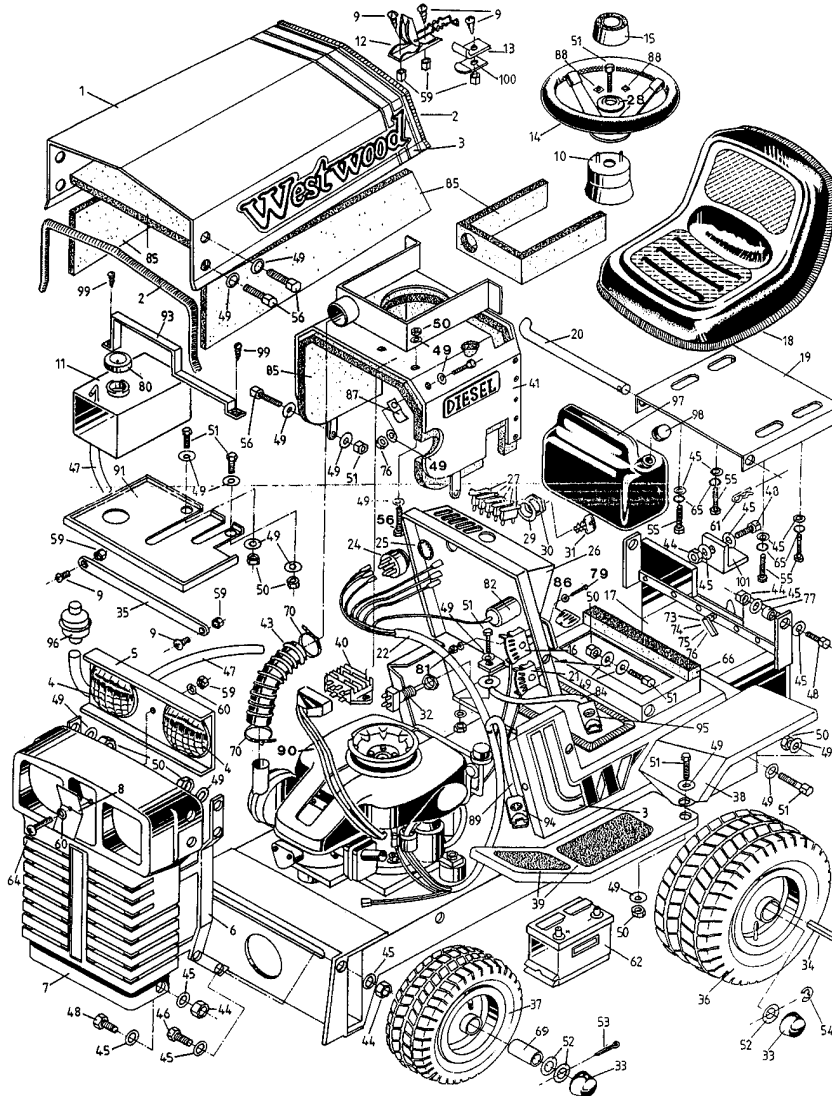

**PARTS ILLUSTRATION FOR:  
T1200 (Diesel) and T1600  
Upper Frame, Bonnet & Grille, Console,  
Electric, Seat, Steering Wheel, Road  
Wheels**



## PARTS LIST FOR: T1200 (Diesel) and T1600

### Upper Frame, Bonnet & Grille, Console, Electrical, Seat, Steering Wheel, Road Wheels


Item	Part No	Description	Qty
1	1643	Bonnet T1200	1
	1797	Bonnet T1600	1
2	1488	Beading, Bonnet Front	1
	1489	Beading, Bonnet Rear	1
	1802	Beading, Bonnet Sides – T1600	1
	2101	Beading, Engine Deflector – T1600	1
3	2701	Transfers, Tractor Set – T1200	1
	2702	Transfers, Tractor Set – T1600	12
4	1536	Headlamp	2
5	1497	Retaining Plate, Headlights	1
6	2257	Grille Support T1200	1
	2102	Grille Support T1600	1
7	1492	Grille	1
8	1495	Grille Plate	1
9	1734	Screw 2BA x 1/2" LG Pan Hd	4
10	2780	Steering Wheel Shroud	2
11	2811	Fuel Tank	1]
12	1490	Bonnet Catch	1
13	2058	Bonnet Clip	1
14	2367	Steering Wheel Mk4	1
15	2059	Steering Wheel Cap	1
16	2793	Engine Stop Control – T1200	1
	1807	Engine Choke Control – T1600	1
17	1819	Rubber Flap Assembly	1
18	1660	Seat	1
19	12742	Seat Mounting Plate	1
20	2067	Seat Hinge Pin	1
21	2794	Throttle Control T1200	1
	1507	Throttle Control T1600	1
22	2795	Wiring Loom T1200	1
	2100	Wiring Loom T1600	1
23	1530	Solenoid (not shown) T1600	1
24	1649	Starter Switch	1
25	2049	Washer, 5/8" dia. Shakeproof	1
26	2262	Console Body	1

Item	Part No	Description	Qty
27.1	2062	Safe Brake & Safe Cutter Green Light	2
27.2	2063	Charge Light, Amber	1
27.3	2064	Ignition Light, Red	1
27.4	2099	Switch, Lights On/Off	1
28	1006	Domed Spring Washer, 3/8" ID x 1 3/4" OD	1
29	1976	Washer, 5/8" ID x 1" OD	1
30	2065	Nut, Special, Starter Switch	1
31	2066	Key, Starter Switch	2
32	1608	Switch, Cutter Safety	1
33	2068	Hub Cap	4
34	1664	key, 3/16" Sq. Parallel x 2" Long	2
35	3359	Support Brace	1
36	1586	Rear Wheel Assembly	2
	1662	Rim, Rear Wheel	2
	1588	Tube, Rear Wheel	2
	1587	Tyre, Rear Wheel	2
37	2796	Front Wheel Assembly	2
	2797	Rim, Front Wheel	2
	1539	Tyre, Front Wheel	2
	1540	Tube, Front Wheel	2
38	1501	Mud Guard LH	1
	1502	Mud Guard RH	1
39	1650	Footrest Mats – Set	2
40	2814	Rectifier (T1200) (Lombardini Pt No. 2760, 7362, 022 FVIC)	1
41	2815	Engine Cover Assy (T1200)	1
43	2839	Hose, Air Intake (T1200)	1
44	1324	Nut, 3/8" UNF Nyloc	7
45	1323	Washer 3/8" Dia. Plain	18
46	2016	Bolt, 3/8" UNF x 1 1/4" LG	2
47	2822	Hose, Fuel	1
48	1966	Bolt, 3/8" UNFX x 1" LG	5
49	1105	Washer, 5/16" Dia. Plain	56
50	1273	Nut, 5/16" UNF Nyloc	30

Item	Part No	Description	Qty
51	1334	Bolt, 5/16" UNF x 1/3" LG	19
52	1099	Washer 3/4" ID x 1 1/4" OD	6
53	1227	Split Pin 1/8" dia. x 1 3/4" LG	2
54	1663	"E" Clip 3/4" dia. Shaft	2
55	2034	Setscrew 3/8" UNC x 3/4" LG	4
56	1335	Bolt, 5/16" UNF x 1 1/4" LG	4
57	1969	Sol/nut 5/16" UNF, Thin Nyloc (Not Shown)	2
58	2047	T1600 Solenoid (Not Shown)	2
59	1053	Nut, 2BA Nyloc	13
60	1962	Washer, 2BA Plain	8
61	1225	"R" Clip	1
62	1209	Battery Type 138	1
63	2107	Engine Oil Drain Pipe & Plug T1600	1
	2809	Engine Oil Drain Pipe & Plug T1200	1
64	1735	Screw, 2BA x 3/4" LG	3
65	1633	Washer, 3/8" dia. Shakeproof	4
66	2079	Seat Spring	1
67	2108	Exhaust Stub – T1600 (Not Shown)	1
68	2029	Setscrew 4BA x 3/8" LG (T1600 Exhaust)	2
69	3354	Bush, Oilite 3/4" ID x 1" OD x 3/4" LG	4
70	2826	Hose Clip Jubilee No.3 (Air Intake)	2
71	2827	Hoser Clip Jubilee No.00 (Fuel Line)	2
72	2828	Hose Clip No.8, Plastic (Fuel Line)	3
73	1795	Bolt, Special 1/4" UNF x 1 1/2" LG	1
74	1796	Stop Piece	1
75	2042	Nut, 1/4" UNF, Thin Nyloc	1
76	1270	Nut, 1/4" UNF Nyloc	1
77	1680	Spacer, 3/8" ID x 1/2" OD x 3/16" LG	2
78	2046	Washer, Locking 4BA (T1600 Exhaust Stub)	2
79	2021	Screw, 4BA x 1/2" LG Throttle Controls	4
80	1806	Cap Fuel Tank	1
81	1144	Nut, 4BA Nyloc Throttle Controls	4





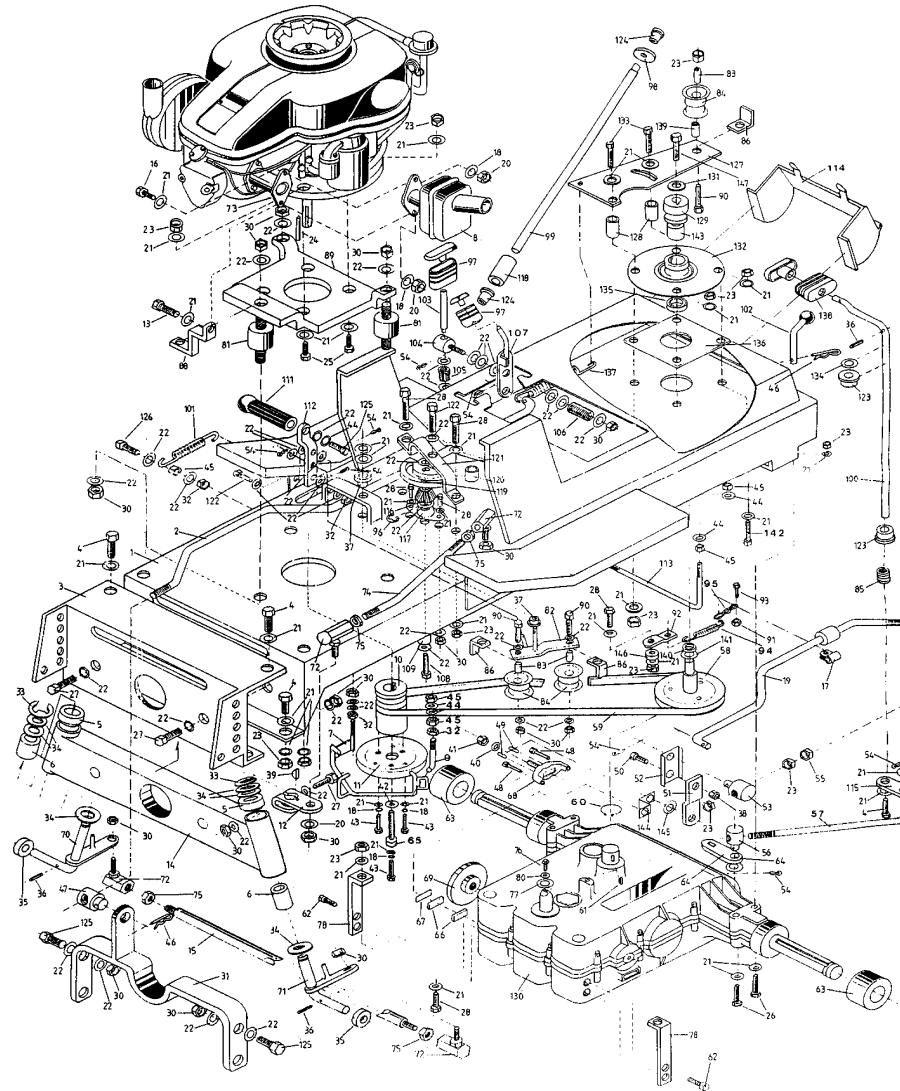

**PARTS ILLUSTRATION FOR:  
MK4 Tractors S600, S800, T800, T1100,  
T1200 Diesel and T1600 Tractors  
(T1200 Illustrated)**

## PARTS LIST FOR: MK 4 Tractors

**S600, S800, T800, T1100, T1200 Diesel and T1600 Tractors (T1200 Illustrated)**


Item	Part No	Description	Qty	Item	Part No	Description	Qty	Item	Part No	Description	Qty
1	2238	Chassis (all models)	1	19	1710	Brake Rod	1	46	1225	'R' Clip	2
2	2355	Cutter Engage Rod ("S" Series)	1	20	2040	Nut, 5/16" Plain	2	47	1695	Swivel Engage Rod	1
	1671	Cutter Engage Rod (T800, T1100)	1	21	1105	Washer, 5/16" Plain	28	48	1983	Setscrew, 1/4" UNC x 1 1/4" LG	2
	1672	Cutter Engage Rod (T1600)	1	22	1323	Washer, 3/8" Plain	36	49	1984	Dowel Pins 1/4" dia x 3/4" LG	2
	2802	Cutter Engage Rod (T1200)	1	23	1273	Nut, 5/16" UNF Nyloc	20	50	1156	Bolt, 1/4" UNF x 3/4" LG	1
3	2249	Chassis Front Bracket	1	24	1181	Woodruff Key, No 6 (6HP only)	1	51	1985	Brake Arm	1
4	1982	Setscrew, 5/16" UNF x 3/4" LG	5		1602	Drive Key, 1/4" square	1	52	1986	Brake Arm Extension ('T' models)	1
5	2293	Stub Axle Spacer	3	25	1318	Bolt, 5/16" UNF x 2" LG (6HP only)	3		2356	Brake Arm Extension ('S' models)	1
6	3355	Nylon Bush (6, 8 and 11 HP only)	4		2688	Bolt, 5/16" UNF x 1 1/4" LG (6HP only)	1	53	1693	Brake Rod Swivel	1
	3354	Bush, Oilite (T1200, T1600)			1321	Bolt, 5/16" UNF x 1 1/2" LG		54	1233	Split Pin, 1/8" dia x 3/4" LG	8
		001"- I/D 3/4"	4			(8, 11 HP Diesel)	4	55	1964	Nut, 5/16" UNF Binx	2
7	2313	Belt Guide (30" cutter units)	1		1336	Bolt, 5/16" UNF x 2 1/4" LG (16HP only)	4	56	1694	Swivel, Gear Change Rod	1
	2311	Belt Guide (36" cutter units)	1	26	1978	Bolt, 5/16" UNF x 2 1/2" LG ('T' series)	4	57	2271	Rod, Gear Change ('T' models)	1
	2312	Belt Guide (32" and 36"			1933	Bolt, 5/16" UNF x 3 1/2" LG ('S' series)	4		2272	Rod, Gear Change ('S' models)	1
		Contra Cutter Units)	1	27	1200	Bolt, 3/8" UNF x 2 1/2" LG	3	58	2821	Transaxle Pulley/PTO ('S' models)	1
	2314	Belt Guide (T1600/42")	1	28	1327	Bolt, 5/16" UNF x 1" LG	5		2819	Transaxle Pulleys/PTO ('T' models)	1
	2804	Belt Guide (T1200/42")	1	29	1666	Washer, Plain 3/8" ID x 1 3/4" OD	2		3356	Transaxle Pulleys/PTO (T1600 only)	1
8		Muffler (Refer to		30	1324	Nut, 3/8" UNF Nyloc	15	59	1688	Belt Transmission	1
		Engine Manufacturers Parts List)	1	31	2329	Hitching bracket	1	60	1996	Circlip, External 5/8" dia	1
9	2319	Pin, Belt guide retaining	1	32	1979	Half nut, 3/8" UNF Nyloc	5	61	1104	Key, Woodruff No 9	1
10	2307	Engine Pulley Block (6HP only)	1	33	1663	'E' Clip 3/4" dia	2	62	1987	Setscrew, 5/16" UNC x 7/8" LG	2
	2308	Engine Pulley Block	1	34	1099	Washer, 3/4" ID x 1 1/4" OD	4	63	1715	Spacer, 3/4" ID x 1 1/4" OD x 1 5/8" LG	2
11	1745	Engine Cutter Drive Pulley		35	1980	Spacer, 3/4" ID x 1 1/4" OD x 3/8" LG	2	64	2273	Gear Change Arm (Transaxle)	1
		('S' Models)	1	36	1553	Roll Pin, 1/8" dia x 1 1/2" LG	3	65	2586	Bolt, 7/16" UNF x 3" LG	1
	1558	Engine Cutter Drive Pulley		37	2833	Bush, flanged 1/2" OD x 5/15" ID			2690	Bolt, 3/8" UNF x 3 1/4" LG (6HP only)	1
		('T' Models)	1			x 1/2" LG	2	66	1988	Brake Pad (Transaxle)	1
12	2286	Steering Arm	1	38	1270	Nut, 1/4" UNF Nyloc	1	67	1989	Brake Pad Plate (Transaxle)	1
13	1321	Bolt, 5/16" UNF x 1 1/2" LG		39	1098	Key, Woodruff No 13	1	68	1990	Brake Pad Holder (Transaxle)	1
		(T1200 only)	1	40	1981	Washer, 5/16" ID x 1" OD	1	69	1995	Disc Brake (Transaxle)	1
14	2296	Axle Beam	1	41	1969	Nut, thin 5/16" UNF Nyloc	1	70	2291	Stub Axle RH	1
15	2691	Track Rod	1	42	1737	Washer, 7/16" dia plain	1	71	2287	Stub Axle LH	1
16	2688	Setscrew 5/16" UNC x 1 1/4" LG		43	2031	Setscrew, 5/16" UNF x 1" LG	3	72	1551	Rod End and Ball Joint	4
		(T1200 only)	1	44	1633	Washer, 3/8" dia shakeproof	7	73	2824	Exhaust Stub (T1200 only)	1
17	1977	Clip, Brake safety switch	1	45	1422	Nut, 3/18" UNF Plain	7	74	2285	Steering Rod (T1200 only)	1
18	2048	Washer, 5/16" shakeproof	3						2807	Steering Rod (Kinked)	1



## PARTS LIST FOR: MK 4 Tractors

**S600, S800, T800, T1100, T1200 and T1600 Tractors (T1200 Illustrated)**


Item	Part No	Description	Qty	Item	Part No	Description	Qty	Item	Part No	Description	Qty
75	1991	Nut, Locking 1/2" UNF	4	110	2354	Spacer, Transaxle ('S' Models)				1 7/16" OD x 1" ID x 4mm	As req
76	1992	Setscrew, 1/4" UNF x 3/8" LG	1			Not shown	4	141	2641	Spindle Spacer	
77	1046	Washer, 1/2" dia, Plain	1	111	2004	Foot Pedal Bar				1 7/16" OD x 1" ID x 2mm	As req
78	2831	Support Bracket (Transaxle)	2		2009	Foot Pedal Rubber	1	142	1334	Bolt, 5/16" UNF x 3/4" LG	2
79		Not Allocated	1	112	2505	Foot Pedal Arm	1	143	2784	Spacer, PTO Pulley	1
80	1331	Washer, 1/4" dia. Plain	1	113	2332	Hanger Bar, Cutter Deck		144		Bracket, Peerless Pt No. 786086	1
81	2812	Flexible Engine Mounts (T1200)	3	114	2893	Flap PTO Access	1	145		Bracket, Peerless Pt No. 792076	1
82	2715	Arm Jockey Pulley	1	115	2270	Link Plate, Gear Change	1				
83	2306	Bush, Jockey Pulley	2	116	2276	Steering Gear	1				
84	2694	Jockey Pulley	2	117	1699	Bearing, Steering Column Base	1				
85	2574	Spring, Compression	1	118	2277	Spacer, Steering Column	1				
86	1706	Belt Guide (Jockey Pulley)	2	119	2279	Steering Quadrant	1				
87	2333	Deck Stop (not illustrated)	1	120	2284	Bush, Steering Quadrant Pivot	1				
88	2825	Bracket, Exhaust (T1200)	1	121	2278	Bridge Support, Steering Quadrant	1				
89	2818	Bracket, Engine mount (T1200)	1	122	1267	Bolt, 3/8" UNF x 2 1/2" LG	2				
90	1997	Bolt, 3/8" UNF x 1 3/4" LG	3	123	1860	Bush, Flanged 1/2" ID x 5/8" OD x 1/2" LG	2				
91	1998	Nut, 2BA Plain	1	124	2588	Bush, Flanged 5/8" ID x 3/4" x 1" LG	1				
92	1609	Brake Safety Switch	1	125	2015	Setscrew, 3/8" UNF x 1" LG	3				
93	1999	Screw, 2BA x 1/2" LG	1	126	2016	Bolt, 3/8" UNF x 1 1/4" LG	1				
94	2000	Tension Spring	1	127	2786	Jockey Plate	1				
95	2592	Chain Link	1	128	2787	Spacer, Jockey Plate	2				
96	2589	'E' Clip, 5/8" dia Shaft	1	129	2820	Pulley, PTO Drive	1				
97	2648	Knob	2	130	2018	Transaxle Unit (6, 8 and 11HP)	1				
98	2275	Washer, Steering Column	1		2019	Transaxle Unit (T1200, T1600)	1				
99	2274	Steering Column	1	131	1006	Washer, Dome Spring	1				
100	2269	Gear Change Lever	1	132	1955	Bearing Housing	1				
101	2103	Spring Tension (Clutch/Brake)	1	133	1388	Bolt, 5/16" UNF x 2" LG	2				
102	1399	Pin, Tow Hitch	1	134	2587	Washer, 1/2" ID x 1" OD	1				
103	2643	Parking Brake Plunger	1	135	1180	Bearing, PTO Shaft	1				
104	2302	Pivot Boss, Engage Lever	1	136	2834	Plate, Bearing Retainer	1				
105	2003	Spring Compression (Park Brake)	1	137	2791	Spring Tension	1				
106	1613	Spring Compression (Engage Lever)	1	138	2649	Knob, Gear Lever	1				
107	2644	Cutter Engage/Disengage Lever	1	139	2788	Bush, PTO Jockey Pulley	1				
108	2590	Setscrew, 3/8" UNF x 1 1/4" LG	1	140	2640	Spindle Spacer					
109	2593	Spacer, 5/8" x 1/2" (Gear Stop)	1								

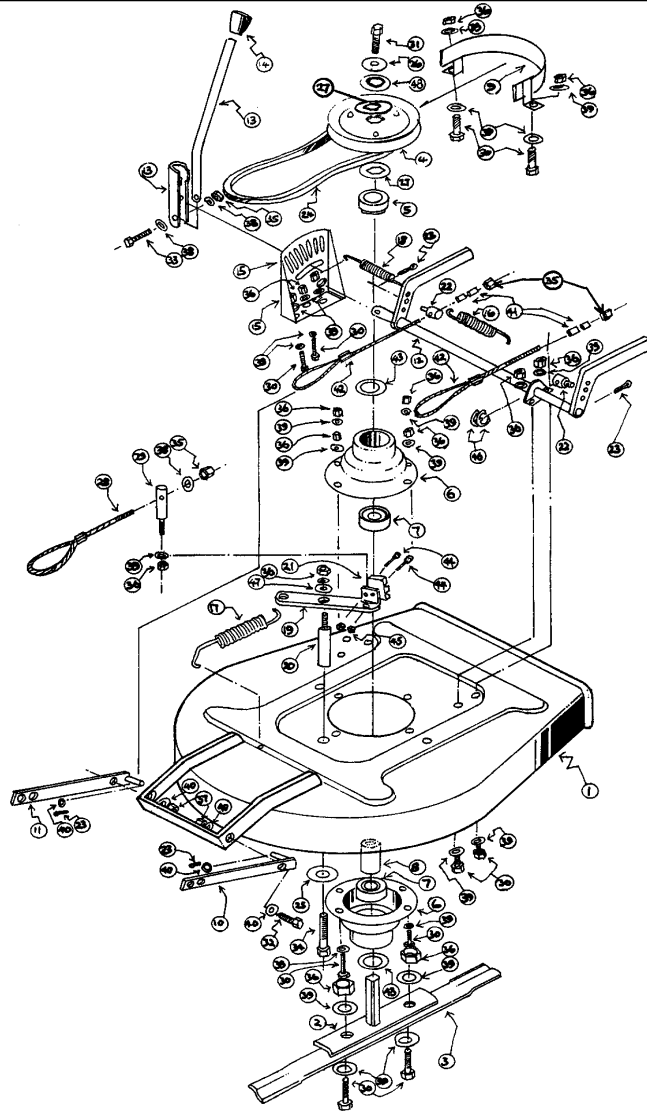

**PARTS ILLUSTRATION FOR:  
30" Grass Cutter**




**PARTS ILLUSTRATION FOR:  
36" Standard Grass Cutter**

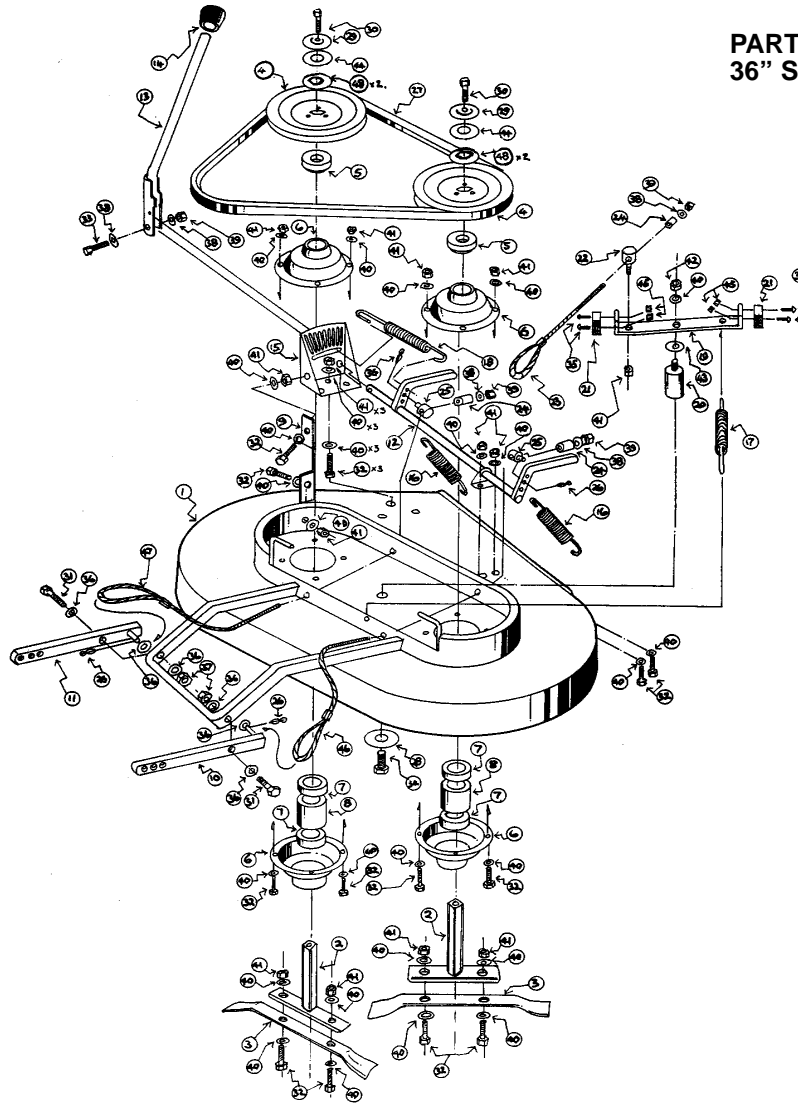





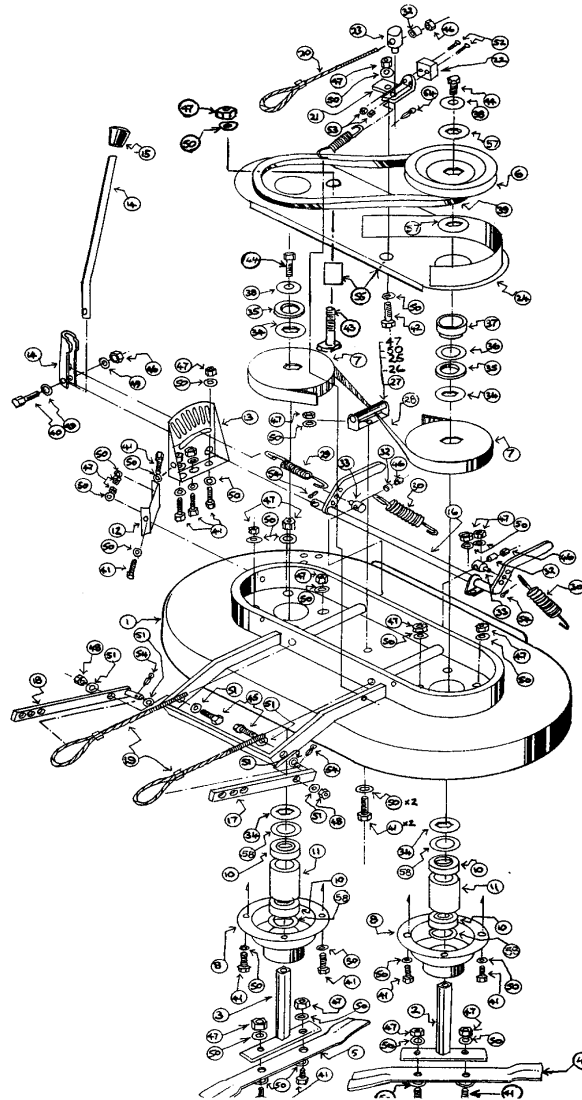

**PARTS ILLUSTRATION FOR:  
Contra-Rotating Grass Cutters  
32", 36" and 42"**

## PARTS LIST FOR: Contra-Rotating Grass Cutters, 32", 36" and 42"

Item	Part No	Description	Qty
1	2464	32" Cutter Deck	1
	2435	36" Cutter Deck	1
	2477	42" Cutter Deck	1
2	2391	Blade Spindle LH (Long)	1
3	2452	Blade Spindle RH (Short)	1
4	2472	Cutter Blade LH (32")	1
	2450	Cutter Blade LH (36")	1
5	2486	Cutter Blade LH (42")	1
	2473	Cutter Blade RH (32")	1
	2451	Cutter Blade RH (36")	1
	2487	Cutter Blade RH (42")	1
6	2498	Cutter Drive Pulley	1
7	2652	Toothed Cutter Pulleys	2
8	1951	Bearing Housing Lower	2
9	1955	Bearing Housing Upper (Not shown)	2
10	1180	Ball Bearing	4
11	2454	Bearing Spacer	2
12	2474	Height Adjuster Bracket (32")	1
	2456	Height Adjuster Bracket (36")	1
13	2398	Height Adjustment Plate (32"/36")	1
	2485	Height Adjustment Plate (42")	1
14	2646	Height Adjustment Lever	1
15	2649	Knob	1
16	2385	Hanger Bar	1
17	2442	Bar Hitch LH	1
18	2440	Bar Hitch RH	1
19	2653	Lift Cable	2
20	2494	Brake Operating Rod (32")	1
	2495	Brake Operating Rod (36")	1
	2493	Brake Operating Rod (42")	1
21	2457	Brake Arm	1
22	1621	Brake Pad	1
23	2434	Brake Cable Pivot	1
24	2470	Belt Guard Cover (32")	1
	2446	Belt Guard Cover (36")	1

Item	Part No	Description	Qty
	2483	Belt Guard Cover (42")	1
25	1972	Bolt, 5/16" UNF x 3 1/4" LG	1
26	2443	Belt Separator Bracket Upper	1
27	2445	Belt Separator Roller Bearings	4
28	2655	Toothed Belt (1200, 8m20)	1
	2659	Toothed Belt (1280, 8.20)	1
	2660	Toothed Belt (1440, 8m20)	1
29	2595	Tension Spring (Height Adjuster Lever)	1
30	1946	Tension Spring, Hanger Bar (32")	2
	1076	Tension Spring, Hanger Bar (36"/42")	2
31	2594	Tension Spring, Cutter Brake	1
32	1733	Spacer	3
33	1756	Pivot Lift Cables	2
34	2455	Hexagonal Dimpled Washer	6
35	1632	Washer, Plain 25mm ID x	
		42mm OD (thick)	2
36	1631	Washer, Plain 25mm ID x	
		42mm OD (thin)	5
37	2412	Pulley Spacer, (32" and 42")	1
38	1006	Washer, Dome Spring	2
39	2225	Belt, Cutter Drive (SP1320) 32"/36"	1
		Belt, Cutter Drive (42-769) 42" (T1600)	1
40	2022	Bolt, 1/4" UNF x 1 1/4" LG Hex HD	1
41	1982	Setscrew, 5/16" UNF x 3/4" LG Hex HD	19
42	1933	Bolt, 5/16" UNF x 3 1/2" LG Hex HD	1
43	1272	Bolt, 5/16" UNF x 2 3/4" LG Hex HD	1
44	1051	Bolt, 3/8" UNF x 1" LG Hex HD	2
45	1054	Bolt, 3/8" UNF x 1 1/2" LG Hex HD	2
46	1270	Nut, 1/4" UNF Self Locking	4
47	1273	Nut, 5/16" UNF Self Locking	23
48	1324	Nut, 3/8" UNF Self Locking	2
49	1331	Washer, Plain 1/4" Dia.	2
50	1105	Washer, Plain 5/16" Dia.	36
51	1323	Washer, Plain 3/8" Dia.	6
52	1735	Machine Screw, 2BA x 3/4" LG Pan HD	2

Item	Part No	Description	Qty
53	1053	Nut, 2BA Self Locking	2
54	1233	Split Pin, 1/8" x 3/4" LG	5
55	2460	Spacer, 2 1/8" LG x 5/8"	2
56	2573	Compression Spring Cutter	
		Brake Rod (not shown)	1
57	2621	Hexagonal Dimpled Washers	2
58	2640	Spindle Spacer	4